

Trusonus


TRADUKI

TE-01


True Wireless Earphone

USER'S GUIDE


Contents of set

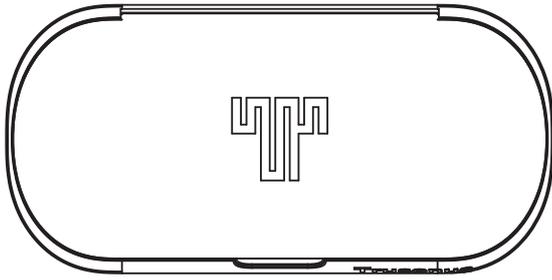

Charging Case

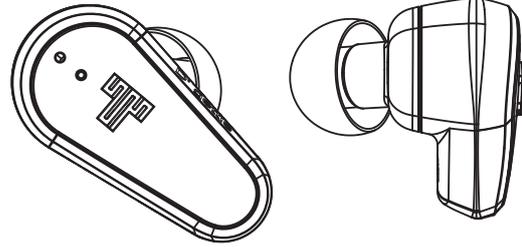


TWS earphones

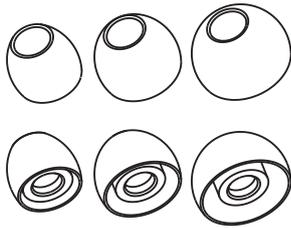

3 pairs ear tips



1 pair
foam ear tips *

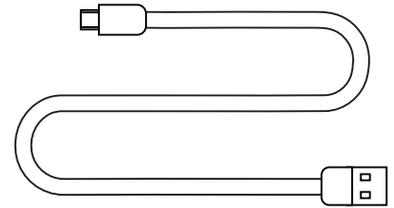

USB Type C
charging cable

*There might be bass loss when wearing earbuds with the foam ear tips.

Product Specifications

Communication system	Bluetooth version 5.0
Compatible Bluetooth profiles	HSP, HFP, A2DP, AVRCP
Maximum communication range	Approx. 10 m*
Earbud dimension	35 x 25 x 18 mm
Earbud weight	15g
Earbud battery capacity	60mAh
Frequency band	2.402GHz~2.480GHz
Impedance	14 Ω
Non Directional mic	sensitivity : -42±0.5dB
Charging case dimension	85 x 42 x 38mm
Charging case weight	47.5g
Charging case battery capacity	500mAh
Support codec	SBC,AAC
Operating time	Play music Approx. 5 hours
Charging time	Earbud: Approx. 1hours Charging case: Approx. 1.5 hours

*Transmission distance may varies according to different mobile phone or Bluetooth device and environmental factors

Product overview



- 1. Case battery LEDs
- 2. Charging port
- 3. Battery level indicator button
- 4. Battery level indicator LED
- 5. Earbud charging contacts

- 6. Microphone port
- 7. Earbud status LED
- 8. Earbud multi-function button
- 9. Earbud charging contacts
- 10. Microphone port

How to use

***Please fully charge your charging case before first use (take out the earbuds from it).**

Power on the earbuds

Take your earbuds from the charging case and the earbuds would power on automatically.

Turn off the earbuds

Place the earbuds in the charging case and it will turn off automatically.

Connect both earbuds

Blinking blue for once
(Ready to connect)



Blinking blue and red
(Pairing)



Blinking blue twice every 10s
(Connected)




x 1



↔



10s x 2

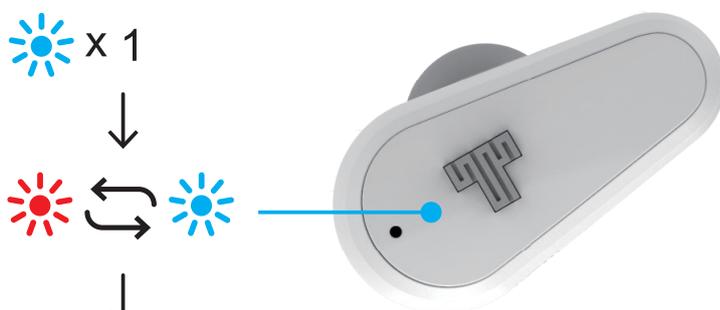


Connecting to a device

For iPhone

“setting”→turn on “bluetooth”
→tap “TE-01”→Connect.

For android

“setting”→turn on “bluetooth”
→tap “TE-01”→Connect.

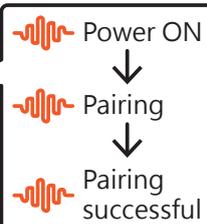

Use earphone with one side

Take out the earphone you want to use.

It's also possible of use one side.


Charging the earbuds

Red LED on/ Charging.

Red LED off/ Finish charging.

Check charge status

Press the battery status indicator button to alternately check the battery status of the charging case.

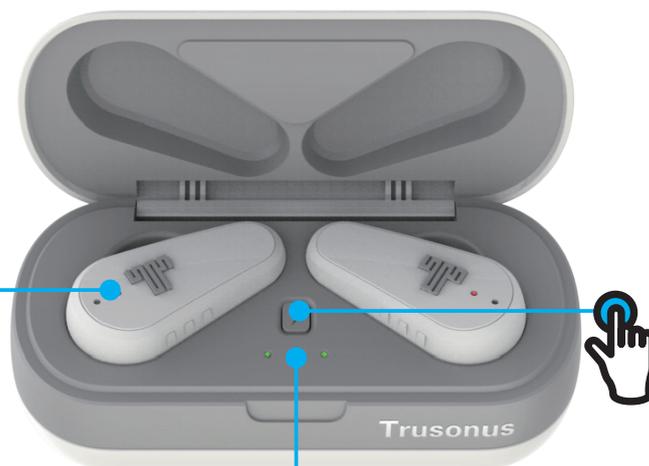

-  Green Light 1
Battery status 40%
-  Green Light 2
Battery status 70%
-  Green Light 3
Battery status 100%

Charge the charging case


Connect the included USB charging cable (Type C) to the battery jack of the charging case.

Red LED on/ Charging.

Red LED off/ Finish charging.



***If the product is not been used above 2 weeks, it is recommended to charge the product before use.**

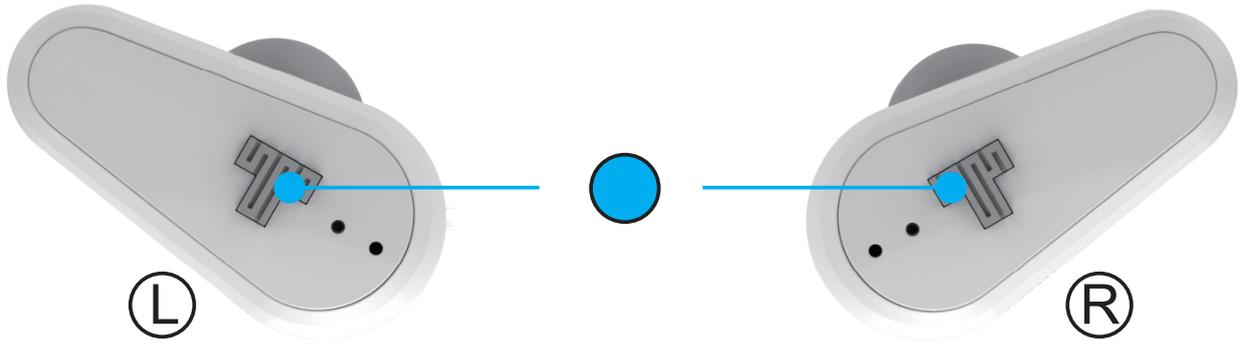

Earbud function	How to use	
Answer/hang up/play/pause  /  /  / 	Press the Earbud L or R button once	Ⓛ x 1 or Ⓜ x 1 
Previous Song 	Press earbud/L twice	Ⓛ x 2 
Next Song 	Press earbud/R twice	Ⓜ x 2 
Rejecting call 	Press twice Earbud L/R	Ⓛ Ⓜ x 2 
Voice assistant 	Long press L earbud for 1.5 seconds.	Ⓛ 1.5s 
Ambient sound mode 	Long press R earbud for 1.5 seconds.	Ⓜ 1.5s 

Translation Function


Give one of the earphones to the person you want to talk to (this earphone can be either left or right) and select the interpreter language on the smartphone screen.



Speaker A :

Press the earphone button once and speak. After talking, press the same button again to start interpreting.


The contents of the conversation are displayed on the smartphone screen In both languages, characters are also displayed.

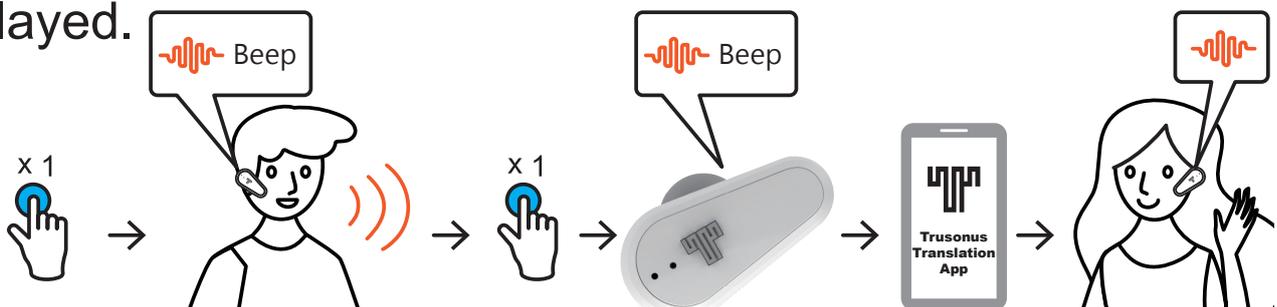

Speaker B :

Press the earphone button once and speak. After talking, press the same button again to start interpreting.

The contents of the conversation are displayed on the smartphone screen In both languages, characters are also displayed.

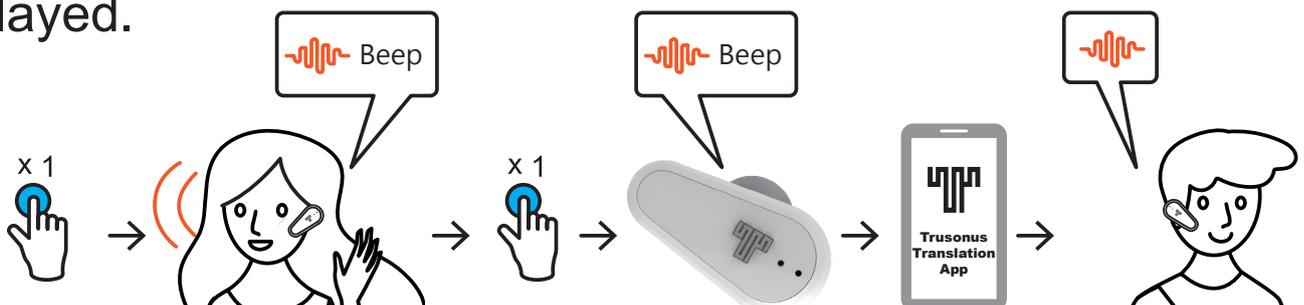

Translate APP

Before you begin, you will need:


Download Trusonus APP, Android or iOS version.



Trusonus TE-01



Support up to 32 languages translation :

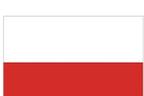
	English(USA)		Greece		Portugal
	Arabian		Hungary		Romania
	Czech		Indonesia		Russia
	Chinese Simplified		Indian		Spain
	Chinese Traditional		Italy		Slovakia
	Croatia		Japan		Sweden
	Denmark		Korea		Thailand
	English(England)		Malaysia		Turkey
	Finland		Netherlands		Ukraine
	France		Norway		Vietnam
	Germany		Poland		

Translate application manual

- **Welcome page**




Connected with earphone.

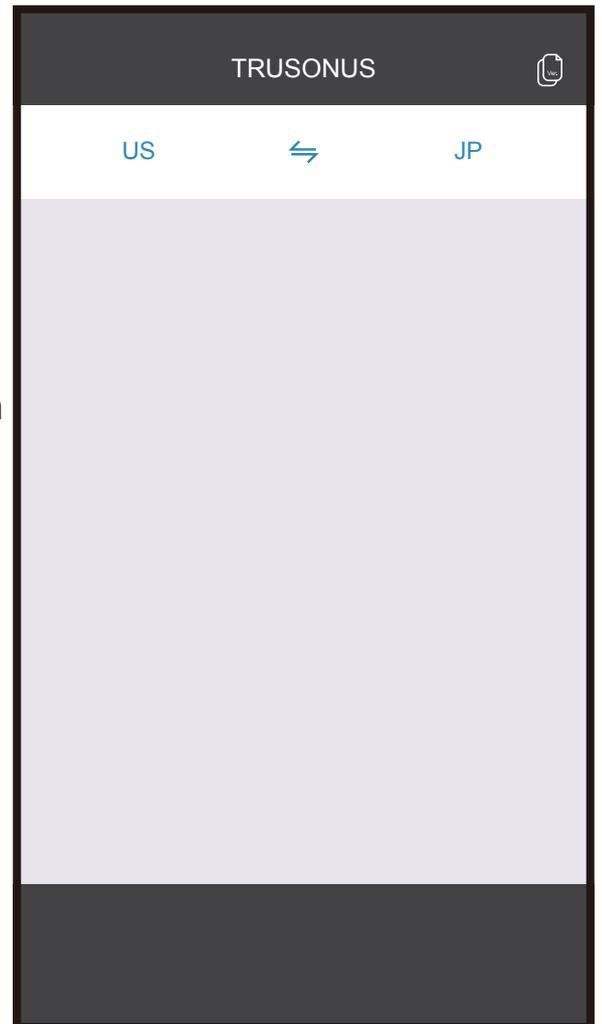


After the earphone connects to Bluetooth, when you start the Trusonas app, this page opens.

• Translate records and status page

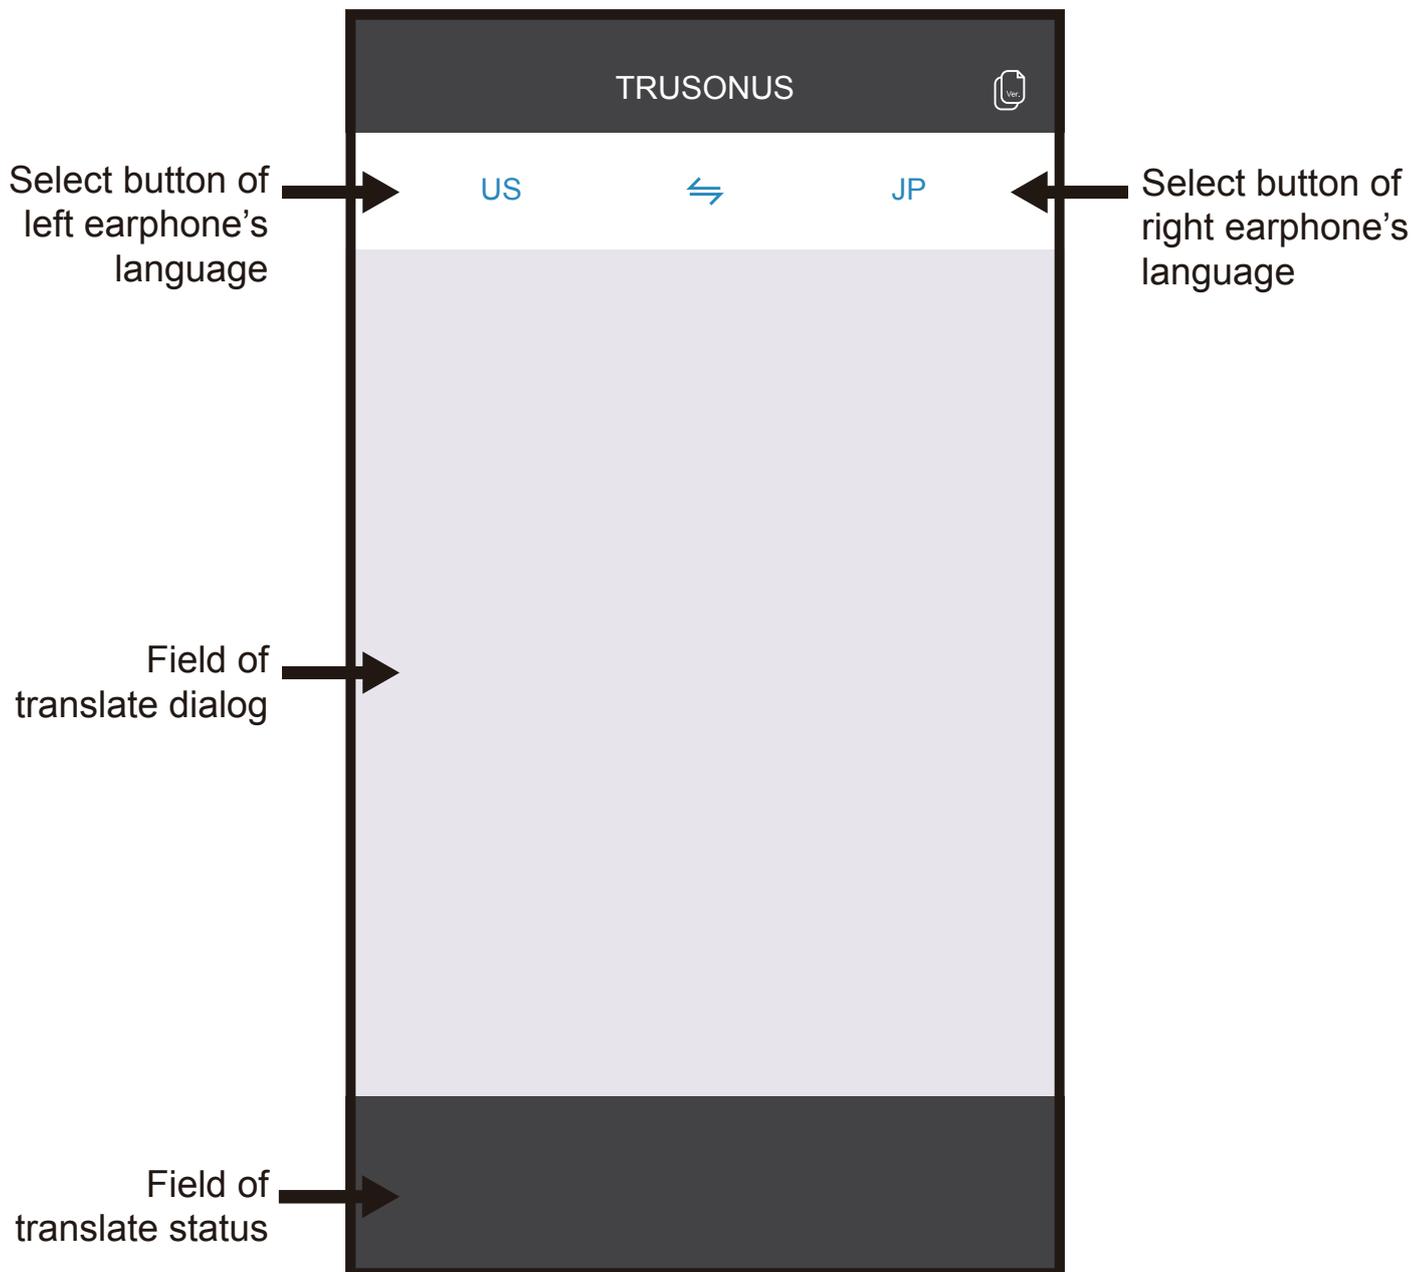

On the right side of screen is a conversation record in the language selected by the right earphone. The left earphone is displayed in the selected language on the left side of screen. The conversation record is displayed.


- **Display screen when using the interpreter function ①**

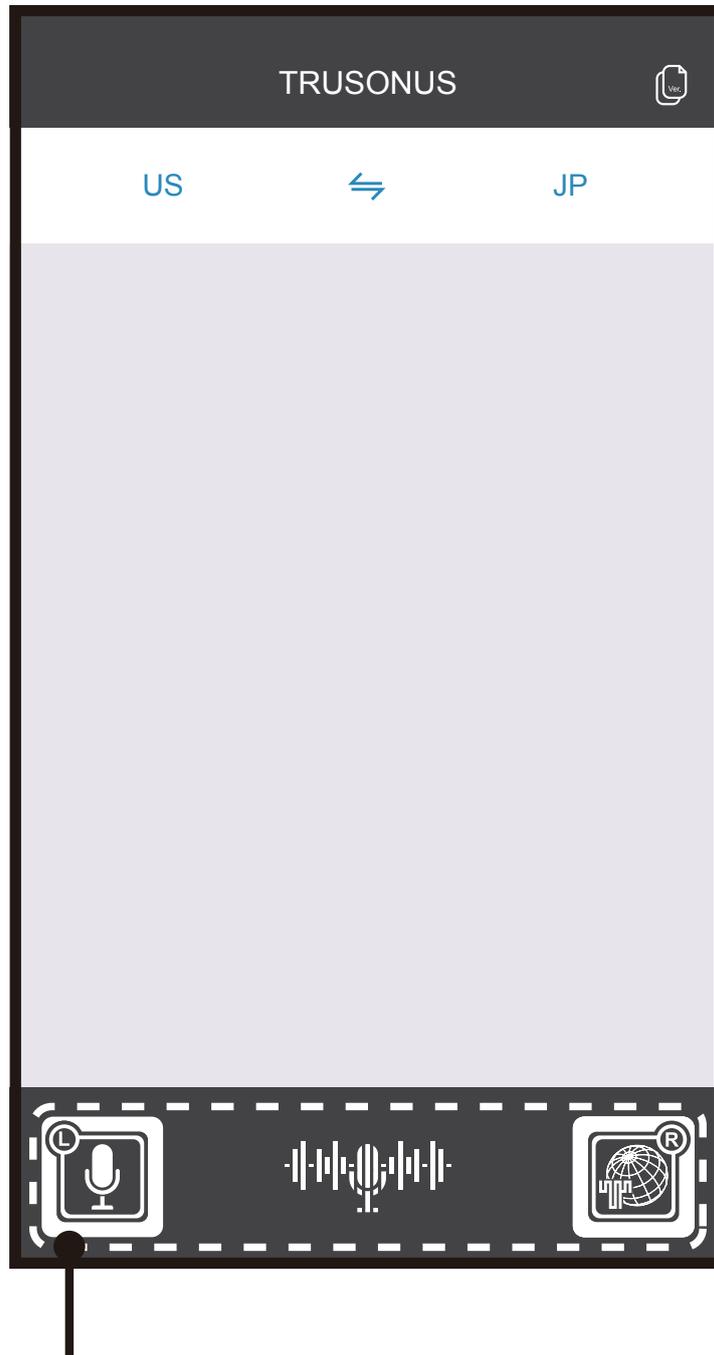

When pressing left (right) earphone's button, the icons of translate status field will change.

When you press the button on the left earphone and speak, A picture of the microphone is displayed, and what you spoke Will be recorded with letters.


- **Display screen when using the interpreter function ②**

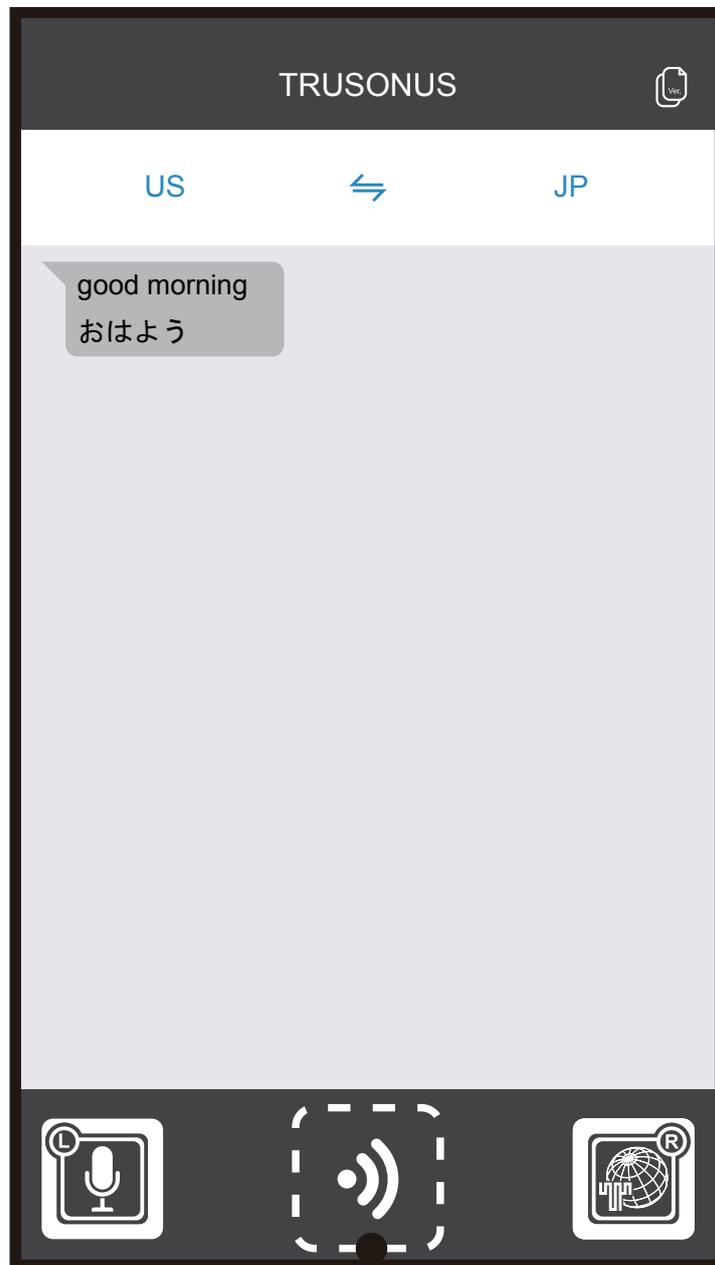

When translate complete, both earphones will playing translated dialog and change icon.


When you have finished talking, press the projection button again. And in the middle of the screen, this icon is displayed and the interpreter starts, Sound is played from the earphone in the language of the other one.

• Language selection method

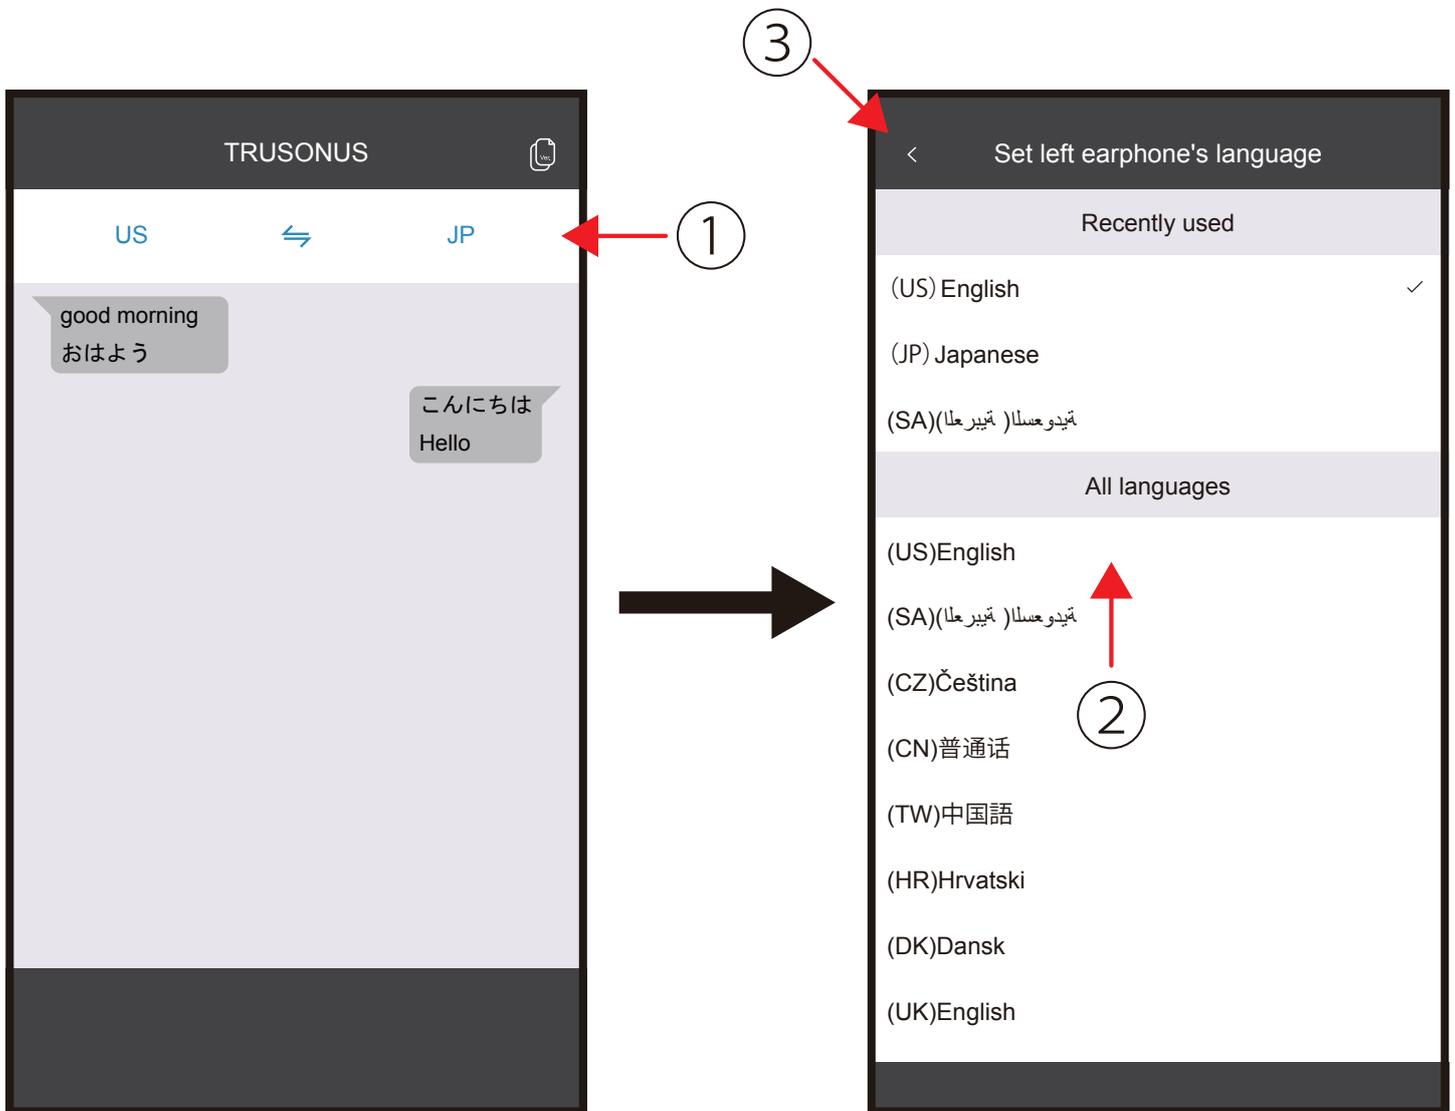


- ① Tap the button to change language of Correspondent speaker / earbud.
- ② Tap the language to decide.
- ③ Tap to back status page.

• confirmation screen of firmware and application version

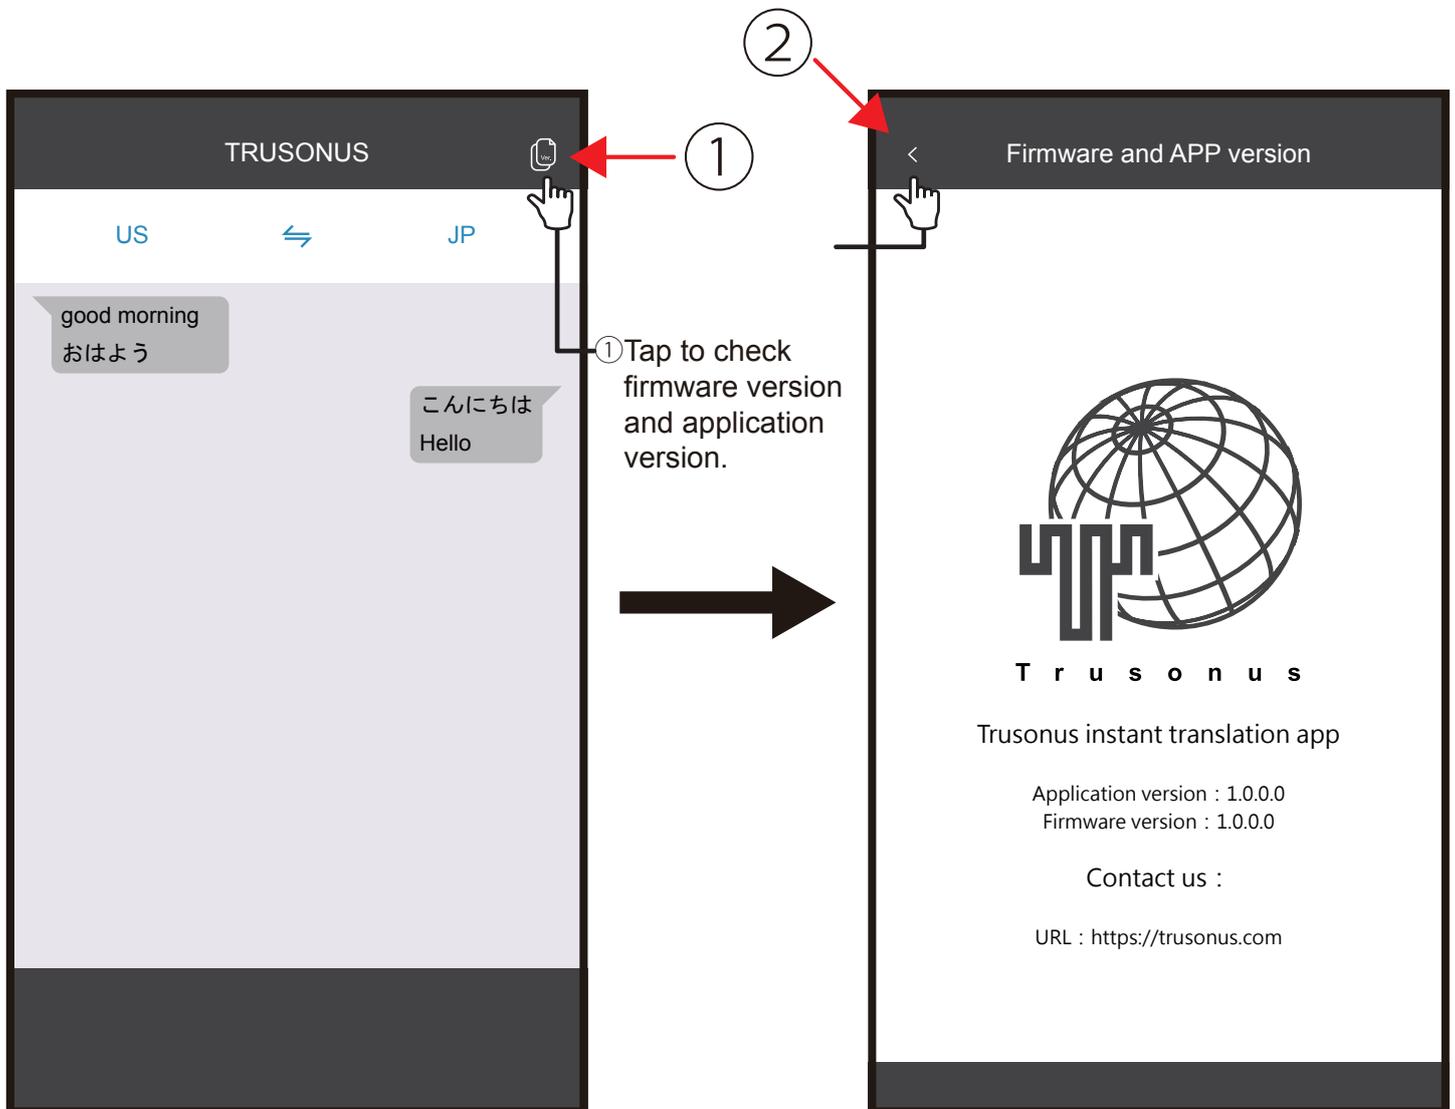

- ① Tap to check firmware version and application version.
- ② Tap to back status page.

• App error display on screen

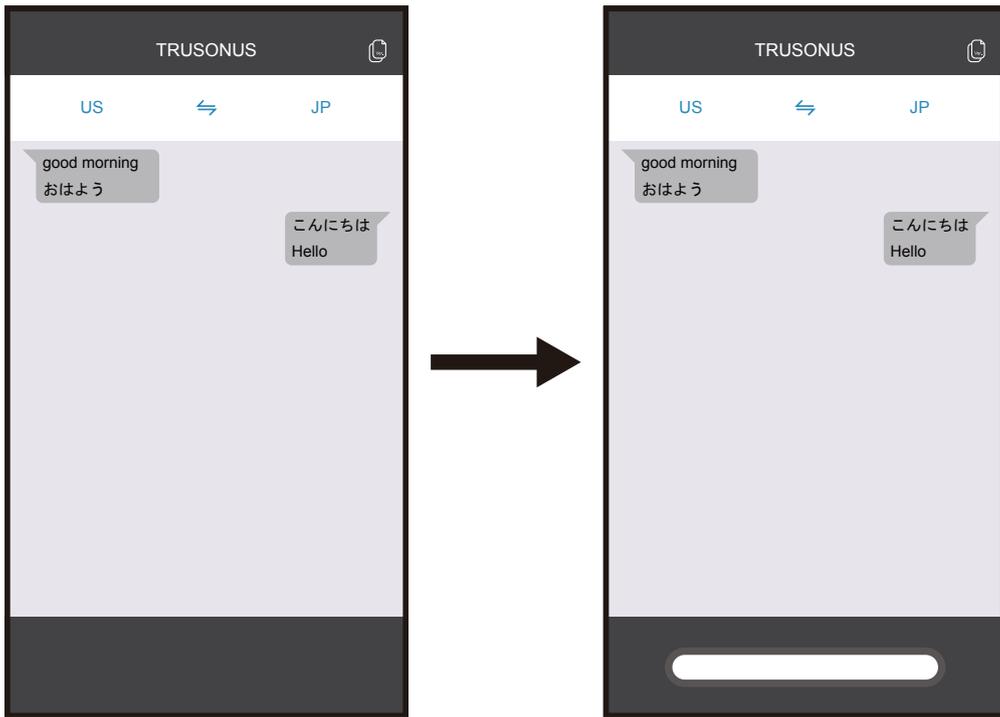

Internet/Server error occurred.



Internet/Server error occurred, please restart application

or :



Connection Error

If an error message appears,
Close the app and return to the home screen → Double-tap the home button → clear the screen → restart the app

Warranty

- Precautions

- Medical device interference

- There are magnets in the earphone and charging case. These electromagnetic fields and magnets can interfere with pacemakers, defibrillators, or other medical devices.

- Please keep a safe distance from the medical device. Discontinue use if you suspect interference with a pacemaker, defibrillator, or other medical device.

- * Connection with all Bluetooth devices cannot be guaranteed.

- Bluetooth devices connected with the unit must comply with the Bluetooth standard

- Even when a connected device complies with the Bluetooth standard, there may be cases where the characteristics or specifications of the Bluetooth device make it unable to connect, or result in different control methods, display, or operation. When using the unit to perform hands-free talking on the phone, noise may occur depending on the connected device or the communication environment. Depending on the device to be connected.

- * Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices.

- Security Instruction

- Listening to loud music for a long time may cause hearing damage.

- Please check the volume to a safe level before using your device.

- Please be careful when using for a long time.

- Warranty Term

About warranty

The guarantee period is one year from the date of purchase.

Please always keep the relevant receipt, purchasing list, and the package completely as a record to warranty.

The warranty does not cover damage or malfunctions caused by transportation after purchase, drop during movement, fire, earthquake, flood, lightning, other natural disasters, pollution, salt damage, abnormal voltage, improper use, unauthorized modification, etc.

If any problem occurs,

Please ask the questions online first.

Please prepare a warranty card and inform us of the details of the problem.

Trouble shooting

- **Earbuds don't power on**

If there's enough power of your earbuds.

- **Earbuds can't be paired**

If your bluetooth turned on.

If your bluetooth device is powered on.

If your bluetooth device support the profile of the earbuds.

If there's obstacle between bluetooth devices or the distance is too far.

- **Earbuds don't connect with mobile device**

Check if your earbuds and bluetooth devices are powered on.

If your bluetooth device is connecting with other devices.

If your bluetooth device is at standby mode.

If the registration of your earbuds on bluetooth device has been deleted.

- **No sound**

If your earbuds be paired with bluetooth device.

Is the volume of earbuds or Bluetooth device set to the minimum level.

If there's obstacle between bluetooth devices or the distance is too far.

- **There is noise and echo sound**

If there's obstacle between bluetooth devices or the distance is too far.

Are you using the earbuds near microwaves or Wi-Fi environment that interferes wireless communication.

- **Unable to charge**

Is the charging case and the computer with USB port connected correctly.

Be sure to use the supplied charging cable.

If the charging case connected via a USB hub.

Is the computer connected in power saving or sleep mode.

- **Earbuds don't respond to incoming calls even when connected with mobile phone via Bluetooth**

Is the mobile phone set to silent mode.

Some mobile phones require a switching operation when using Bluetooth.

Check with the instruction manual of the mobile phone.



Trusonus D'gettie
翻訳通訳イヤホン

Join #Trusonus !



Trusonus



Trusonus

www.trusonus.com